



ELECTRIC TOOL PARTS LIST

CORDLESS TV & RADIO
Model UR 18DSML

2017-6-27

(E1)

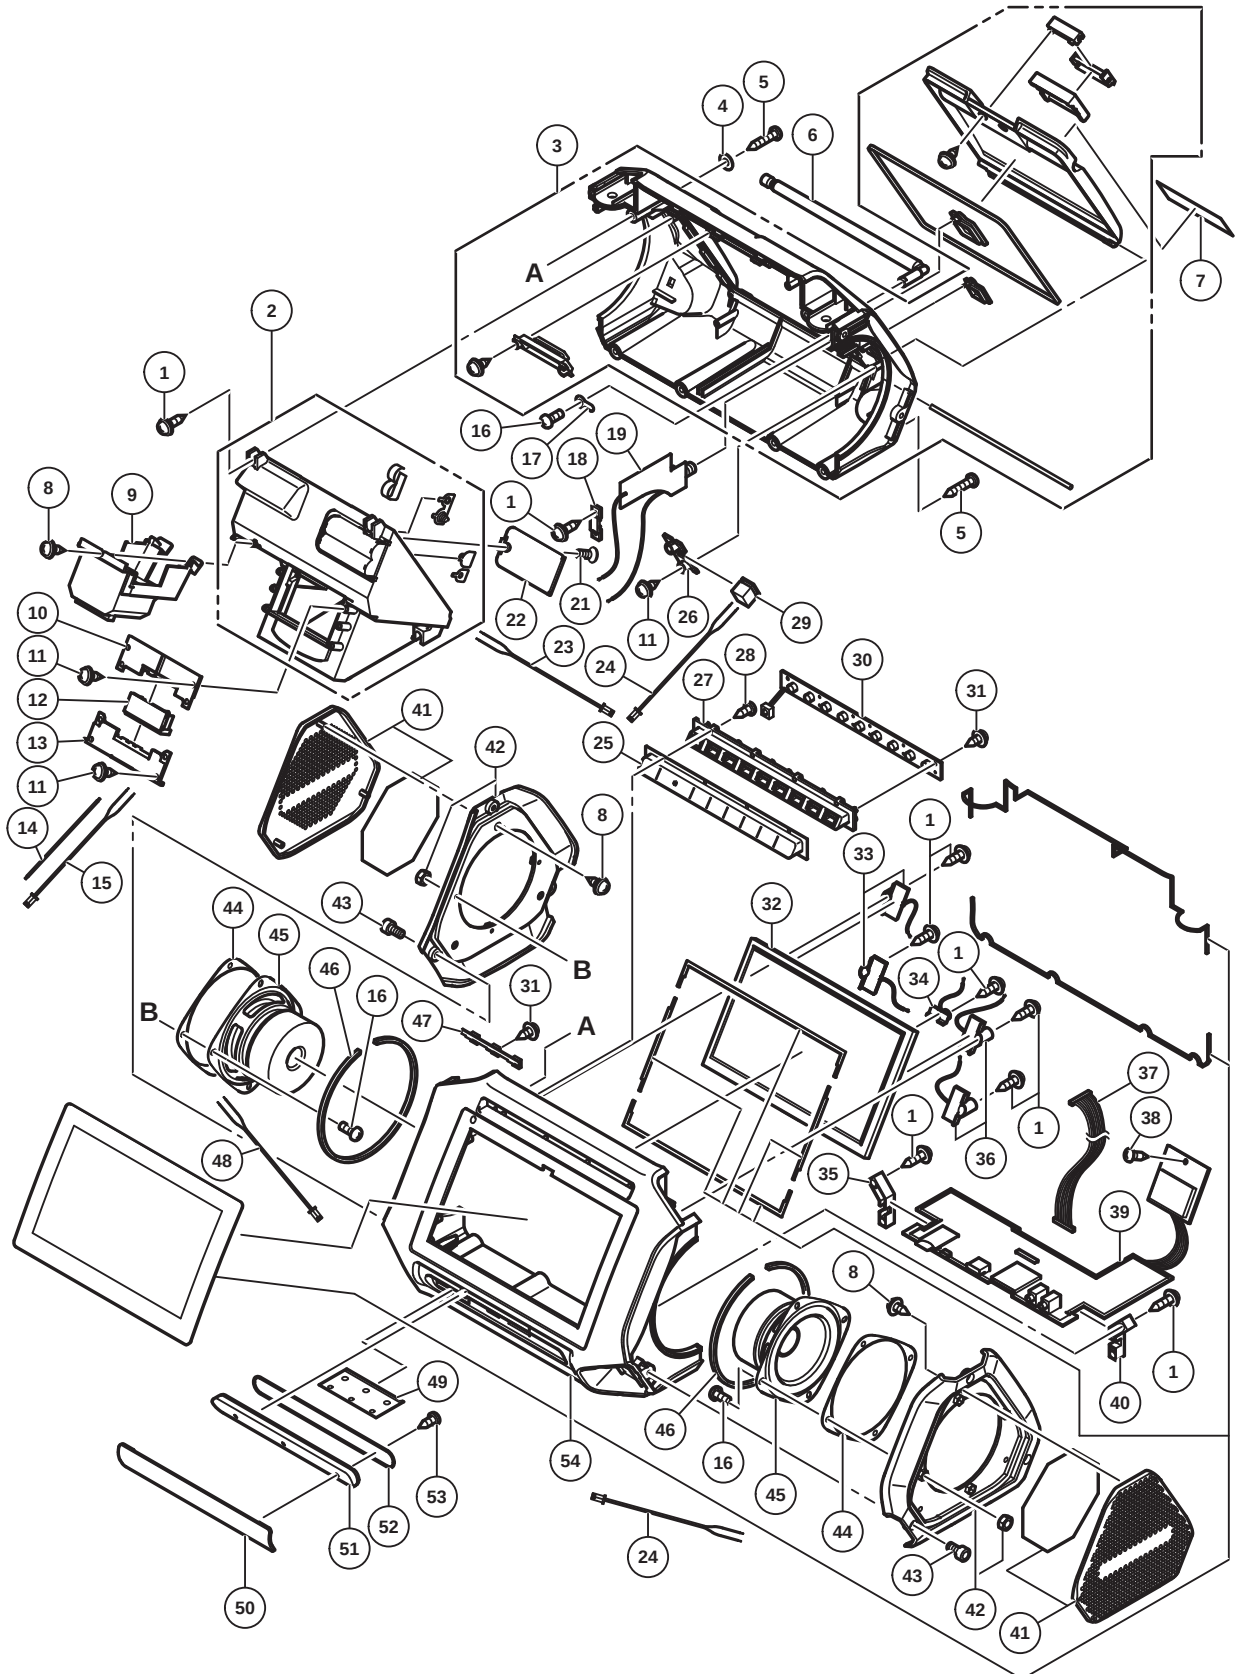

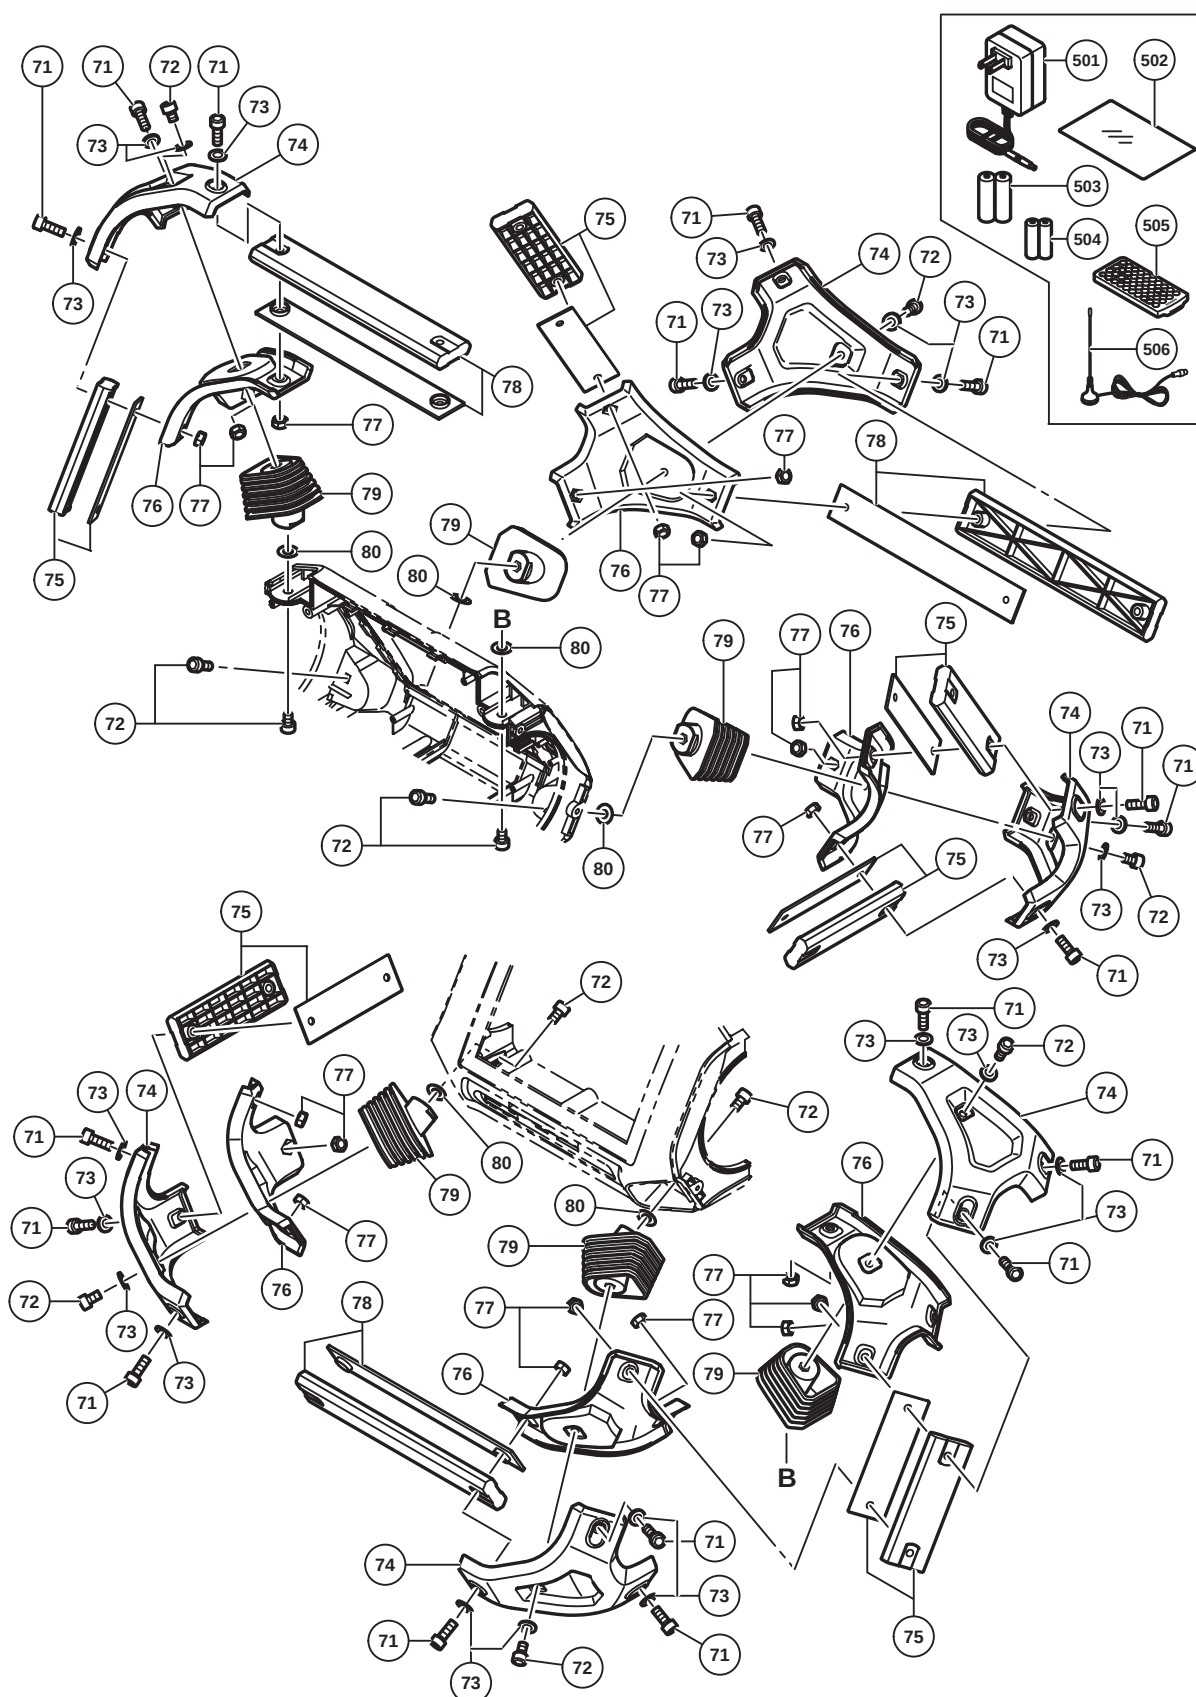

PARTS

UR 18DSML

ITEM NO.	CODE NO.	DESCRIPTION	NO. USED	REMARKS	
1	370845	TAPPING SCREW (W/FLANGE) D3 X 10	15		
2	370868	BATTERY COMPARTMENT SET	1		
3	370867	BACK HOUSING SET	1		
4	371878	RUBBER WASHER	2		
5	372723	TAPPING SCREW (W/FLANGE) D4 X 18	6		
6	371876	ROD ANTENNA	1		
7		NAME PLATE	1		
8	338364	TAPPING SCREW (W/FLANGE) D2 X 8	9		
9	370863	ADAPTER STORAGE CASE	1		
10	338388	UPPER CONTACT BRACKET	1		
11	338399	TAPPING SCREW (W/FLANGE) D2.3 X 8	8		
12	339154	BATTERY TERMINAL	1		
13	338389	LOWER CONTACT BRACKET	1		
14	338407	INTERNAL WIRE (B)	1		
15	338406	CONNECTOR D	1		
16	338398	MACHINE SCREW (W/FLANGE) M3 X 8	9		
17	372786	WASHER D7 X D4.2 X 0.3	1		
18	370843	PRESSING PLATE G	1		
19	370844	PAL TERMINAL PCBA	1		
21	338410	SCREW M3	1		
22	338387	BATTERY COVER	1		
23	338404	CONNECTOR B	1		
24	338405	CONNECTOR C	2		
25	370859	SILICON KEYPAD	1		
26	338394	DC JACK BRACKET	1		
27	370860	KEY PLATE	1		
28	372722	TAPPING SCREW (W/FLANGE) D1.4 X 8	8		
29	338396	DC JACK	1		
30	370865	KEYPAD PCB	1		
31	371879	TAPPING SCREW (W/FLANGE) D2 X 7	15		
32	370851	LCD	1		
33	370849	PRESSING PLATE A	2		
34	370862	PRESSING PLATE C	1		
35	370864	PRESSING PLATE E	1		
36	370850	PRESSING PLATE B	2		
37	371882	CONNECTOR CABLE	1		
38	372721	TAPPING SCREW (W/FLANGE) D2.6 X 8	3		
39	370846	PCB	1		
40	370847	PRESSING PLATE D	1		
41	338370	SPEAKER GRILL SET	2		
42	338377	SIDE PLATE	2		
43	949811	HEX. SOCKET HD. BOLT M4 X 8 (10 PCS.)	6		
44	338402	SPEAKER RESISTANCE STRIP	2		
45	338395	SPEAKER (DSDL)	2		
46	371880	WATER RESISTANCE STRIP F	2		
47	371883	RUBBER HINGE HOLDER	1		
48	371881	CONNECTOR E	1		
49	371877	RUBBER HINGE	1		
50	370857	FRONT TERMINAL COVER	1		
51	370855	PRESSING PLATE F	1		

UR 18DSML

STANDARD ACCESSORIES

- 4 -