


PARTS LIST

1. Model WW 8A

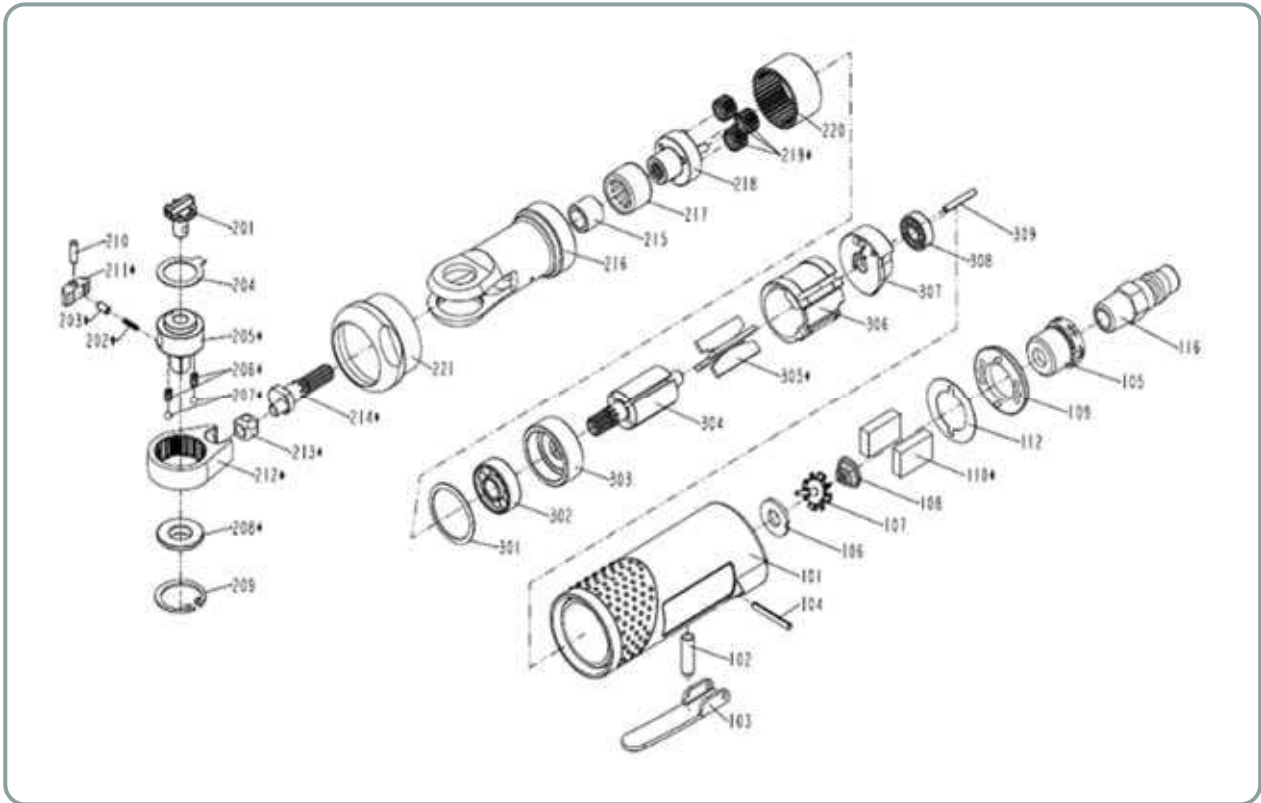

ITEM	PART NAME	QTY
101	HOUSING	1
102	VALVE STEM	1
103	TRIGGER	1
104	SPRING PIN	1
105	AIR INLET	1
106	SEAL	1
107	TIP VALVE	1
108	CONICAL SPRING	1
109	OUTLET CONTROLLER	1
110	MUFFLER	2
112	FILTER	1
116	AIR PLUG	1
201	REVERSE LEVER	1
202	REVERSE SPRING	1
203	REVERSE PIN	1
204	YOKE-WASHER	1
205	ANVIL ASSEMBLY	1
206	THRUST WASHER SPRING	2
207	STEEL BALL	2
208	ANVIL-WASHER	1
209	IN-CENTRIC RING	1

ITEM	PART NAME	QTY
210	PLANET PIN	1
211	RATCHET PAWL	1
212	YOKE	1
213	DRIVE BUSHING	1
214	MOTER SHAFT BALANCER	1
215	BUSHING	1
216	RATCHET HOUSING	1
217	NEEDLE BEARING	1
218	PLAENT CAGE ASSY	1
219	PLANET GEAR	3
220	INTERNAL GEAR	1
221	LOCK RING KEY	1
301	SPRING-WASHER	1
302	BEARING	1
303	FRONT PLATE	1
304	ROTOR	1
305	FAN	4
306	CYLINDER	1
307	REAR END PLATE	1
308	BEARING	1
309	SPRING PIN	1