



HITACHI


CG 36DA • CG 36DA(L) • CG 36DTA • CG 36DTA(L)

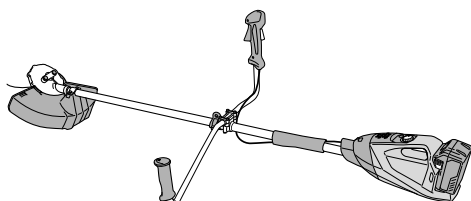


CG36DA

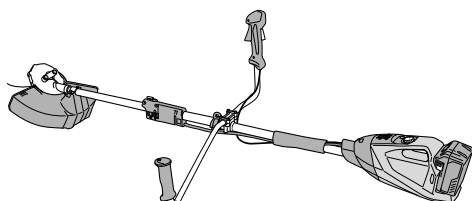

CG36DTA

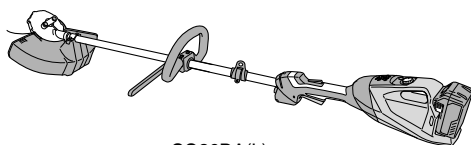


CG36DA(L)

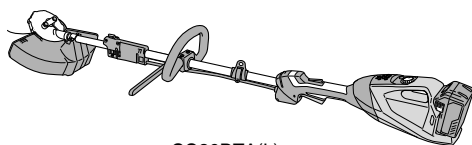


CG36DTA(L)




Handling instructions

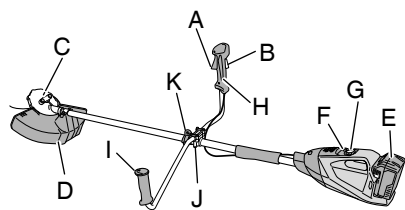


CG36DA

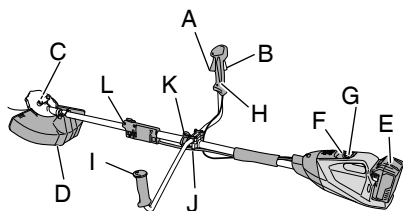











CG36DTA



















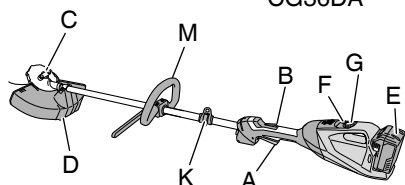















CG36DA(L)

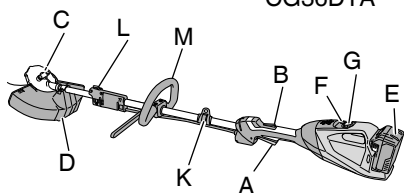


CG36DTA(L)

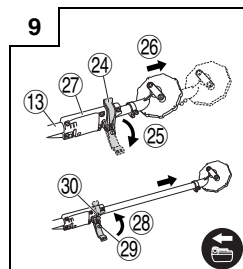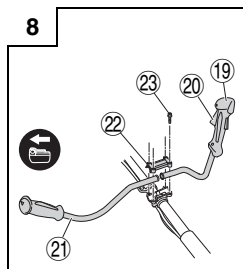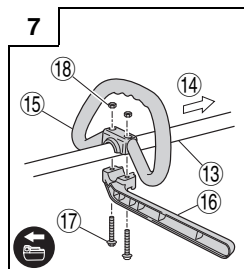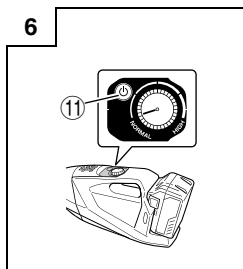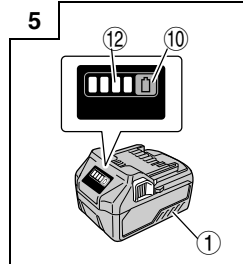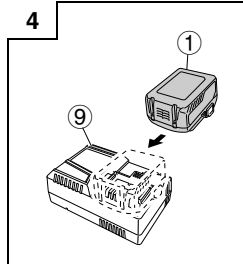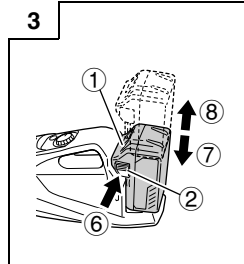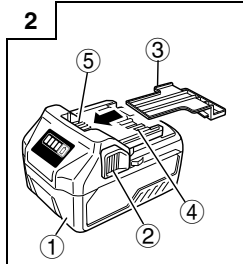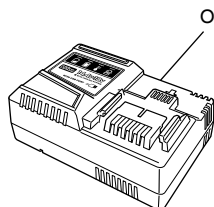 

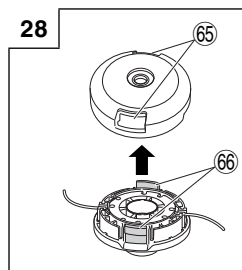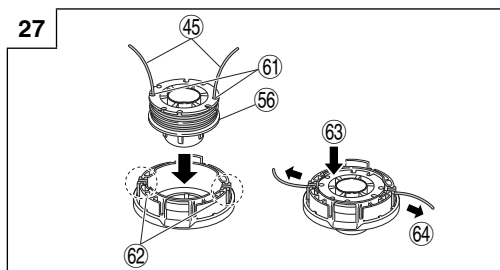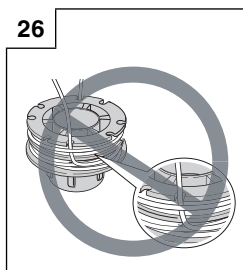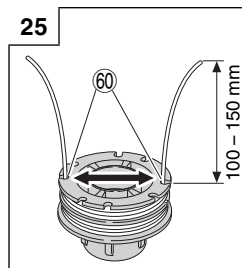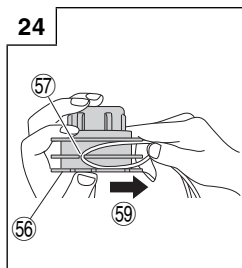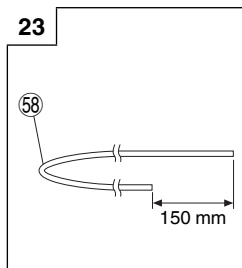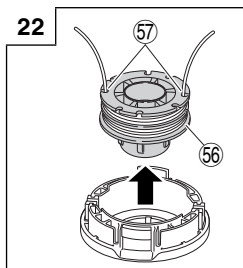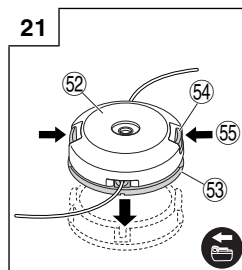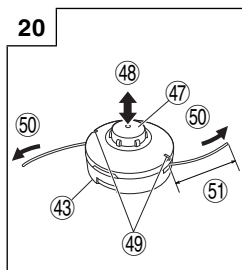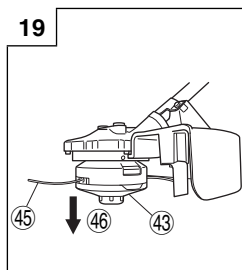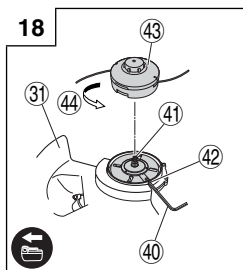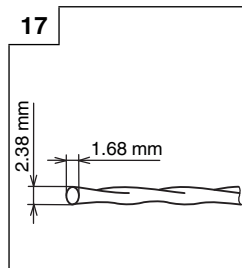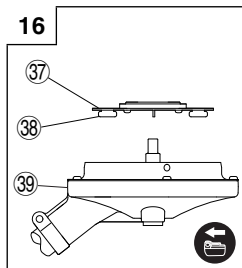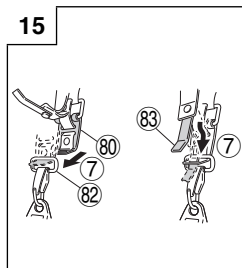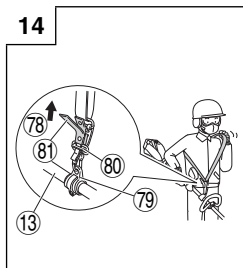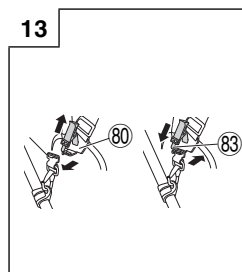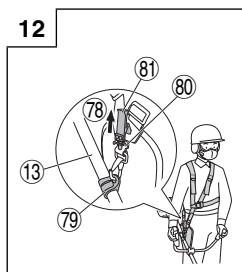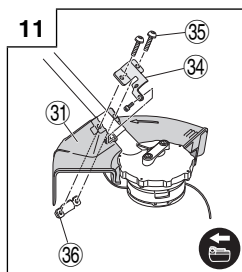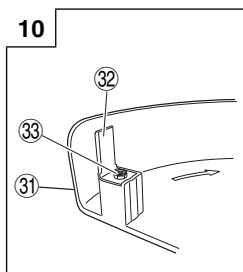


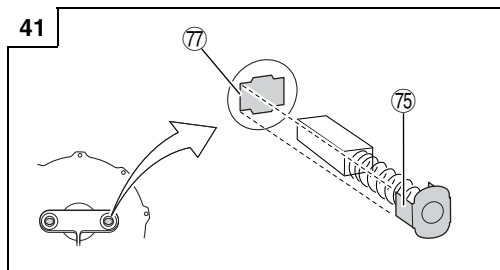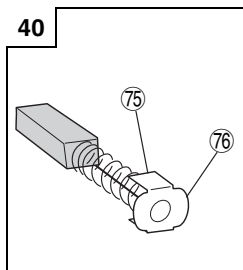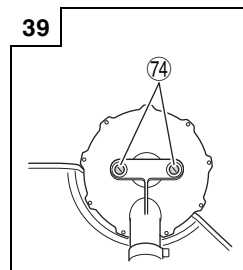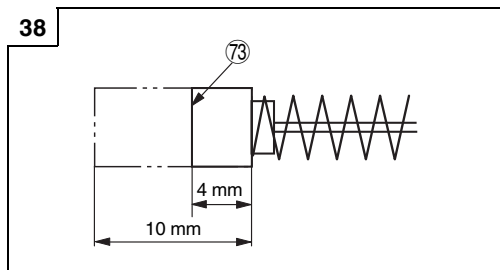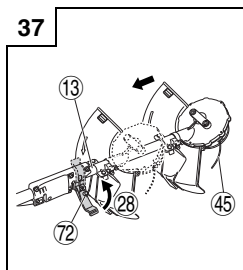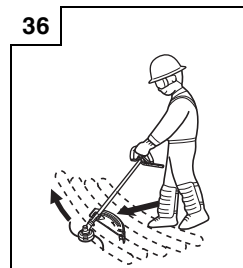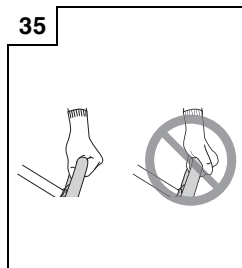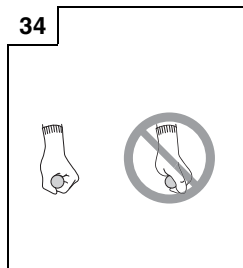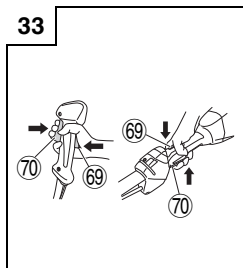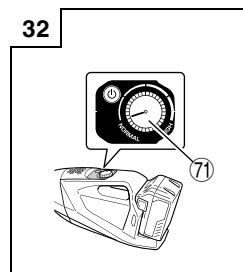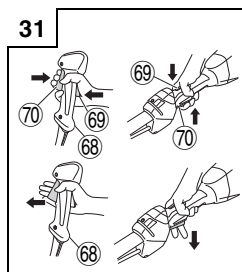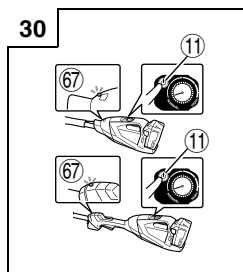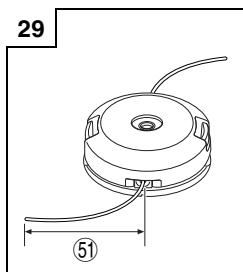


42

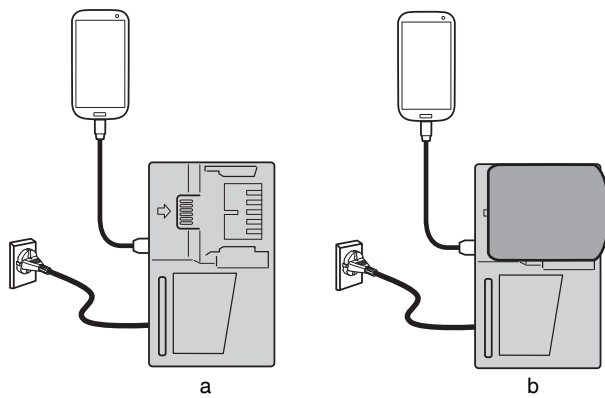

43

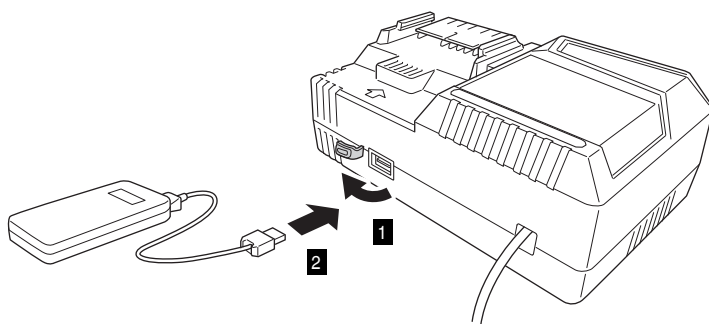



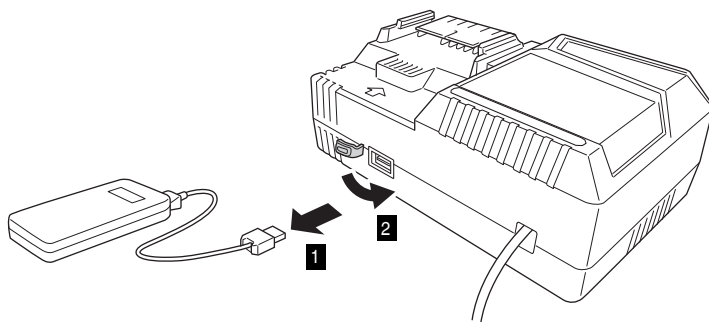















44



SYMBOLS

WARNING

The following show symbols used for the machine.
Be sure that you understand their meaning before use.

	CG36DA / CG36DA (L) / CG36DTA / CG36DTA (L): Cordless Grass Trimmer
	To reduce the risk of injury, user must read instruction manual.
	Always wear eye protection.
	Always wear hearing protection.
	Do not expose to moisture.
	Keep bystanders away.
	Remove battery before adjusting or cleaning and before leaving the machine unattended for any period.
	It is important that you read, fully understand and observe the following safety precautions and warnings. Careless or improper use of the unit may cause serious or fatal injury.
	Read, understand and follow all warnings and instructions in this manual and on the unit.
	Prohibited action
	Always wear eye, head and ear protectors when using this unit.
	Keep all children, bystanders and helpers 15 m away from the unit. If anyone approaches you, stop the unit and cutting attachment immediately.
	Be careful of thrown objects.
	Shows maximum shaft speed. Do not use the cutting attachment whose max rpm is below the shaft rpm.
	Gloves should be worn when necessary, e.g., when assembling cutting equipment.
	Use anti-slip and sturdy footwear.
	Blade thrust may occur when the spinning blade contacts a solid object in the critical area. A dangerous reaction may occur causing the entire unit and operator to be thrust violently. This reaction is called blade thrust. As a result, the operator may lose control of the unit which may cause serious or fatal injury. Blade thrust is more likely to occur in areas where it is difficult to see the material to be cut.
	Power button

WHAT IS WHAT? (Fig. 1)

- A: Lever: Trigger for activating the unit.
- B: Lock lever: Lever that prevents the accidental operation of the trigger.
- C: Motor: Battery-driven, disk-shaped motor.
- D: Cover: Protects operator from flying debris.
- E: Battery: Power source to drive the unit.
- F: Power button: Button for switching the unit's power ON or OFF.
- G: Speed dial: Dial for adjusting the speed of the motor.
- H: Handle right: Handle with lever located on the right side of the unit.
- I: Handle left: Handle located on the left side of the unit.
- J: Handle fixture: Secures the handle to the unit.
- K: Hang: Used for attaching a shoulder or hanger belt to the unit.
- L: Fixing lever
- M: Loop handle
- N: Shoulder belt: Harness with release mechanism for combined use with battery.
- O: Charger: For charging the battery.

GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.
The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet.**
Never modify the plug in any way.
Do not use any adapter plugs with earthed (grounded) power tools.
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool.**
Keep cord away from heat, oil, sharp edges or moving parts.
Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**

Use of a cord suitable for outdoor use reduces the risk of electric shock.

- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.
Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of inattention while operating power tools may result in serious personal injury.

- b) Use personal protective equipment. Always wear eye protection.

Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

- c) Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.

Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

- d) Remove any adjusting key or wrench before turning the power tool on.

A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) Do not overreach. Keep proper footing and balance at all times.

This enables better control of the power tool in unexpected situations.

- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.

Loose clothes, jewellery or long hair can be caught in moving parts.

- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.

Use of dust collection can reduce dust related hazards.

4) Power tool use and care

- a) Do not force the power tool. Use the correct power tool for your application.

The correct power tool will do the job better and safer at the rate for which it was designed.

- b) Do not use the power tool if the switch does not turn it on and off.

Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.

Such preventive safety measures reduce the risk of starting the power tool accidentally.

- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.

Power tools are dangerous in the hands of untrained users.

- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation.
If damaged, have the power tool repaired before use.

Many accidents are caused by poorly maintained power tools.

- f) Keep cutting tools sharp and clean.

Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.

Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Battery tool use and care

- a) Recharge only with the charger specified by the manufacturer.

A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- b) Use power tools only with specifically designated battery packs.

Use of any other battery packs may create a risk of injury and fire.

- c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.

Shorting the battery terminals together may cause burns or a fire.

- d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

Liquid ejected from the battery may cause irritation or burns.

6) Service

- a) Have your power tool serviced by a qualified repair person using only identical replacement parts.

This will ensure that the safety of the power tool is maintained.

PRECAUTION

Keep children and infirm persons away.

When not in use, tools should be stored out of reach of children and infirm persons.

GRASS TRIMMER SAFETY WARNINGS

IMPORTANT

READ CAREFULLY BEFORE USE
KEEP FOR FUTURE REFERENCE

Safe operation practices

● Training

- a) Read the instructions carefully. Be familiar with the controls and the correct use of the machine.
- b) Never allow people unfamiliar with these instructions or children to use the machine. Local regulations can restrict the age of the operator.
- c) Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

● Preparation

- a) Before use check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately.

DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.

Do not use the machine if the cord is damaged or worn.

- b) Before use, always visually inspect the machine for damaged, missing or misplaced guards or shields.
- c) Never operate the machine while people, especially children, or pets are nearby.
- d) Never replace nylon head with metallic cutting means.
- **Operation**
 - a) Wear eye protection, stout shoes and long trousers at all times while operating the machine.
 - b) Avoid using the machine in bad weather conditions especially when there is a risk of lightning.
 - c) Use the machine only in daylight or good artificial light.
 - d) Never operate the machine with damaged guards or shields or without guards or shields in place.
 - e) Switch on the motor only when the hands and feet are away from the cutting means.
 - f) Always disconnect the machine from the power supply (i.e. remove the plug from the mains or remove the disabling device)
 - whenever the machine is left unattended;
 - before clearing a blockage;
 - before checking, cleaning or working on the machine;
 - after striking a foreign object;
 - whenever the machine starts vibrating abnormally.
 - g) Take care against injury to feet and hands from the cutting means.
 - h) Always ensure that the ventilation openings are kept clear of debris.
 - i) Never modify the unit/machine in any way. Do not use your unit/machine for any job except that for which it is intended.
- **Maintenance, transport and storage**
 - a) Disconnect the machine from the power supply (i.e. remove the plug from the mains or remove the disabling device) before carrying out maintenance or cleaning work.
 - b) Use only the manufacturer's recommended replacement parts and accessories.
 - c) Inspect and maintain the machine regularly. Have the machine repaired only by an authorized repairer.
 - d) When not in use, store the machine out of the reach of children.
 - e) When transporting in a vehicle or storage, cover blade with blade cover.

PRECAUTIONS FOR CORDLESS GRASS TRIMMER

WARNING

1. Exercise patience in all work with the tool. And dress properly to keep warm.
2. Plan all work ahead to prevent accidents.
3. Do not operate the tool at night or under bad weather conditions when visibility is poor. And do not operate the tool when it is raining or right after it has been raining. Working on slippery ground could lead to an accident if you lose your balance.
4. Inspect the nylon head before starting work. Do not use the tool if the nylon head is cracked, scarred or bent. Make sure the nylon head is properly attached. A nylon head that falls apart or comes loose during operation could cause an accident.
5. Be sure to attach the cover before starting work. Operating the tool without this parts could lead to injury.
6. Be sure to attach the loop handle before starting work. Make sure it is not loose but properly attached before starting work. Hold the loop handle firmly during work and do not swing the tool around, but use the correct posture and maintain your balance. Losing your balance during work could lead to an injury.
7. Take care when starting the motor. Place the tool on level ground. Do not operate the tool within 15 m of people or animals. Make sure that the nylon head does not come into contact with the ground or trees and plants. A careless start could lead to injury.
8. Do not secure the lock lever. Accidentally pulling back the lever could lead to unexpected injury.
9. Before leaving the tool, press the power button to turn it off.
10. Operate the tool with care near electric cables, gas pipes and similar installations.
11. Look out for and remove empty cans, wire, stones or other obstacles before starting work. And do not work near tree roots or rocks. Working in such areas could damage the nylon head or lead to injury.
12. Never touch the nylon head during operation. Also make sure it does not come into contact with your hair, clothes, etc.
13. In the following situations, turn off the motor and check that the nylon head has stopped rotating. To move to another work area. To remove rubbish or grass that has become stuck in the tool. To remove from the work area obstacles or the rubbish, grass and chips generated by trimming. To lay down the tool. Doing this with the nylon head still rotating could lead to unexpected accidents.
14. Do not use the tool within 15 m of another person. When you work with someone else, maintain a distance of more than 15 m. Flying chips could lead to unexpected accidents. When working on unstable surfaces like slopes, make sure that your co-worker is not exposed to any hazards. Use whistles or other means for calling the attention of your co-workers.
15. When grass and other objects become entangled in the nylon head, turn off the motor and make sure the nylon head has stopped rotating before removing them. Removing objects from the nylon head when it is still rotating will lead to injury. Continuing operation when foreign matter is stuck in the nylon head may lead to damage.
16. If the tool is operating poorly and produces strange noise or vibrations, turn off the motor immediately and ask your dealer to have it inspected and repaired. Continued use under these conditions could lead to injury or tool damage.
17. If you drop or bump the tool, inspect it carefully to check there is no damage, cracks or deformation. Using a tool that is damaged, cracked or deformed could result in injury.
18. Secure the tool during vehicle transport to ensure that it lies still. Failure to heed this warning may result in an accident.
19. This product contains a strong permanent magnet in the motor. Observe the following precautions regarding adhering of chips to the tool and the effect of the permanent magnet on electronic devices.
20. Do not use the product if the tool or the battery terminals (battery mount) are deformed. Installing the battery could cause a short circuit that could result in smoke emission or ignition.
21. Keep the tool's terminals (battery mount) free of swarf and dust.
 - Prior to use, make sure that swarf and dust have not collected in the area of the terminals.
 - During use, try to avoid swarf or dust on the tool from falling on the battery.

- When suspending operation or after use, do not leave the tool in an area where it may be exposed to falling swarf or dust.
Doing so could cause a short circuit that could result in smoke emission or ignition.

CAUTION

- Do not place the tool on a workbench or work area where metal chips are present.
The chips may adhere to the tool, resulting in injury or malfunction.
- If chips have adhered to the tool, do not touch it. Remove the chips with a brush.
Failure to do so may result in injury.
- If you use a pacemaker or other electronic medical device, do not operate or approach the tool.
Operation of the electronic device may be affected.
- Do not use the tool in the vicinity of precision devices such as cell phones, magnetic cards or electronic memory media.
Doing so may lead to misoperation, malfunction or loss of data.

CAUTION

1. Do not turn on the nylon head for cutting objects other than grass. Do not operate the tool in water puddles and make sure that soil does not come into contact with the nylon head.
2. The tool contains precision parts and should not be dropped, exposed to strong impact or water.
The tool could be damaged or malfunction.
3. When the tool is to be stored after use or be transported, remove the nylon head.
4. Do not expose the tool to insecticide and other chemicals.
Such chemicals could cause cracking and other damage.
5. Replace warning labels with new labels when they become difficult to recognize or illegible and when they start to peel.
Ask your dealer to provide the warning labels.
6. Do not touch the motor immediately after use since it may be very hot.

PRECAUTIONS FOR BATTERY AND CHARGER

1. Always charge the battery at an ambient temperature of -10–40°C. A temperature of less than -10°C will result in over charging which is dangerous. The battery cannot be charged at a temperature greater than 40°C.
The most suitable temperature for charging is that of 20–25°C.
2. Do not use the charger continuously.
When one charging is completed, leave the charger for about 15 minutes before the next charging of battery.
3. Do not allow foreign matter to enter the hole for connecting the rechargeable battery.
4. Never disassemble the rechargeable battery or charger.
5. Never short-circuit the rechargeable battery.
Short-circuiting the battery will cause a great electric current and overheat. It results in burn or damage to the battery.
6. Do not dispose of the battery in fire.
If the battery is burnt, it may explode.
7. Using an exhausted battery will damage the charger.
8. Bring the battery to the shop from which it was purchased as soon as the post-charging battery life becomes too short for practical use. Do not dispose of the exhausted battery.
9. Do not insert objects into the air ventilation slots of the charger.
Inserting metal objects or flammable into the charger air ventilation slots will result in an electrical shock hazard or damage to the charger.

CAUTION ON LITHIUM-ION BATTERY

To extend the lifetime, the lithium-ion battery equips with the protection function to stop the output.

In the cases of 1 to 3 described below, when using this product, even if you are pulling the switch, the motor may stop. This is not the trouble but the result of protection function.

1. When the battery power remaining runs out, the motor stops.
In such case, charge it up immediately.
2. If the tool is overloaded, the motor may stop. In this case, release the switch of tool and eliminate causes of overloading. After that, you can use it again.
3. If the battery is overheated under overload work, the battery power may stop.
In this case, stop using the battery and let the battery cool. After that, you can use it again.

Furthermore, please heed the following warning and caution.

WARNING

In order to prevent any battery leakage, heat generation, smoke emission, explosion and ignition beforehand, please be sure to heed the following precautions.

1. Make sure that swarf and dust do not collect on the battery.
- During work make sure that swarf and dust do not fall on the battery.
- Make sure that any swarf and dust falling on the power tool during work do not collect on the battery.
- Do not store an unused battery in a location exposed to swarf and dust.
- Before storing a battery, remove any swarf and dust that may adhere to it and do not store it together with metal parts (screws, nails, etc.).
2. Do not pierce battery with a sharp object such as a nail, strike with a hammer, step on, throw or subject the battery to severe physical shock.
3. Do not use an apparently damaged or deformed battery.
4. Do not use the battery in reverse polarity.
5. Do not connect directly to an electrical outlets or car cigarette lighter sockets.
6. Do not use the battery for a purpose other than those specified.
7. If the battery charging fails to complete even when a specified recharging time has elapsed, immediately stop further recharging.
8. Do not put or subject the battery to high temperatures or high pressure such as into a microwave oven, dryer, or high pressure container.
9. Keep away from fire immediately when leakage or foul odor are detected.
10. Do not use in a location where strong static electricity generates.
11. If there is battery leakage, foul odor, heat generated, discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment or battery charger, and stop use.
12. Do not immerse the battery or allow any fluids to flow inside. Conductive liquid ingress, such as water, can cause damage resulting in fire or explosion. Store your battery in a cool, dry place, away from combustible and flammable items. Corrosive gas atmospheres must be avoided.

CAUTION

1. If liquid leaking from the battery gets into your eyes, do not rub your eyes and wash them well with fresh clean water such as tap water and contact a doctor immediately.
If left untreated, the liquid may cause eye-problems.
2. If liquid leaks onto your skin or clothes, wash well with clean water such as tap water immediately.
There is a possibility that this can cause skin irritation.

3. If you find rust, foul odor, overheating, discolor, deformation, and/or other irregularities when using the battery for the first time, do not use and return it to your supplier or vendor.

WARNING

If an electrically conductive foreign object enters the terminals of the lithium ion battery, a short-circuit may occur resulting in the risk of fire. Please observe the following matters when storing the battery.

- **Do not place electrically conductive cuttings, nails, steel wire, copper wire or other wire in the storage case.**
- **Either install the battery in the power tool or store by securely pressing into the battery cover until the ventilation holes are concealed to prevent short-circuits (See Fig. 2).**


REGARDING LITHIUM-ION BATTERY TRANSPORTATION

When transporting a lithium-ion battery, please observe the following precautions.

WARNING

Notify the transporting company that a package contains a lithium-ion battery, inform the company of its power output and follow the instructions of the transportation company when arranging transport.

- Lithium-ion batteries that exceed a power output of 100Wh are considered to be in the freight classification of Dangerous Goods and will require special application procedures.
- For transportation abroad, you must comply with international law and the rules and regulations of the destination country.

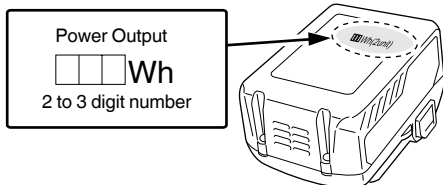

USB DEVICE CONNECTION PRECAUTIONS (UC18YSL3)

When an unexpected problem occurs, the data in a USB device connected to this product may be corrupted or lost. Always make sure to back up any data contained in the USB device prior to use with this product.

Please be aware that our company accepts absolutely no responsibility for any data stored in a USB device that is corrupted or lost, nor for any damage that may occur to a connected device.

WARNING

- Prior to use, check the connecting USB cable for any defect or damage.
Using a defective or damaged USB cable can cause smoke emission or ignition.
- When the product is not being used, cover the USB port with the rubber cover.
Buildup of dust etc. in the USB port can cause smoke emission or ignition.

NOTE

- There may be an occasional pause during USB recharging.
- When a USB device is not being charged, remove the USB device from the charger.
Failure to do so may not only reduce the battery life of a USB device, but may also result in unexpected accidents.
- It may not be possible to charge some USB devices, depending on the type of device.

DESCRIPTION OF NUMBERED ITEMS (Fig. 2 – Fig. 41)

①	Battery	②②	Handle fixture	④③	Nylon head	⑥④	String the line through the eyelet line guide
②	Latch	②③	M5 × 25 hex. Socket bolts	④④	Screw (left rotation)	⑥⑤	Locking holes of cover (2 holes)
③	Battery cover	②④	Locking lever	④⑤	Nylon line	⑥⑥	Tabs of case (2 tabs)
④	Terminals	②⑤	Release	④⑥	Tap	⑥⑦	Power lamp
⑤	Ventilation holes	②⑥	Extend	④⑦	Button	⑥⑧	Handle
⑥	Push	②⑦	Holder case	④⑧	Tap/release	⑥⑨	Lock lever
⑦	Insert	②⑧	Lock	④⑨	Wear limit mark (2 marks)	⑦⑦	Lever
⑧	Pull out	②⑨	Projection of locking lever	⑤⑦	Extends in 30 mm increments	⑦①	Speed dial
⑨	Charge indicator lamp	③⑦	Hole	⑤①	Appropriate length 90 – 110 mm	⑦②	Projection of locking lever
⑩	Battery level indicator switch	③①	Cover	⑤②	Cover	⑦③	Wear limit
⑪	Power button	③②	Knife	⑤③	Case	⑦④	Brush cap
⑫	Battery level indicator lamp	③③	D5 tapping screw	⑤④	Hook	⑦⑤	Nail of carbon brush
⑬	Main pipe	③④	Cover bracket	⑤⑤	Press tabs (2 areas)	⑦⑥	Protrusion of carbon brush
⑭	Housing side	③⑤	M6×25 hex. socket button bolts	⑤⑥	Reel	⑦⑦	Contact portion of brush tube
⑮	Loop handle	③⑥	Cover holder	⑤⑦	Groove	⑦⑧	Pull
⑯	Handle fixture	③⑦	Flange ass'y	⑤⑧	Fold back the middle part	⑦⑨	Hanger
⑰	M6×43 bolts	③⑧	Wing	⑤⑨	Direction to wind nylon cord	⑧⑦	Bracket
⑱	M6 nuts	③⑨	Motor case	⑥⑦	Secure in the stopper	⑧①	Quick-release belt
⑲	Handle right	④⑦	Hex. bar wrench 4 mm	⑥①	Stopper	⑧②	Hook
⑳	Lever	④①	Threaded fastener of the motor case	⑥②	Eyelet line guide	⑧③	Quick-release bracket
㉑	Handle left	④②	Hole	⑥③	While holding the reel		

SPECIFICATIONS

POWER TOOL

Model	CG36DA	CG36DA(L)	CG36DTA	CG36DTA(L)
Voltage	36 V			
Pole type	Straight type		Extendable type	
Cutting capacity diameter	310 mm			
Rotation direction	Counterclockwise as seen from above			
No-load speed	5800 – 7000 /min			
Operating time on one charge* (When supplied rechargeable battery is fully charged)	BSL36A18 42 min (Normal) 18 min (High)			
Battery available for this tool**	BSL36A18			
Weight (with nylon head, rechargeable battery, shoulder belt and cover)	5.4 kg	5.1 kg	5.8 kg	5.5 kg

* The data in the above table is provided only as an example. Since type of grass, ambient temperature, rechargeable battery characteristics, work methods, etc. can vary widely the above should only be used as a rough guideline.

Conditions: Outer diameter of nylon head 310 mm, speed dial set to Normal or High. (lever left ON all the time)
 ** Existing batteries (BSL3660/3620/3626, BSL18xx series, etc.) cannot be used with this tool.

BATTERY

Model	BSL36A18
Voltage	36 V / 18 V (Automatic Switching*)
Battery capacity	2.5 Ah / 5.0 Ah (Automatic Switching*)
Available cordless products**	Multi volt series, 18V product
Available charger	Sliding charger for lithium ion batteries

* The tool itself will automatically switch over.

** Please see our general catalogue for details.

CHARGER

Model	UC18YSL3
Charging voltage	14.4 V – 18 V
Weight	0.6 kg

STANDARD ACCESSORIES

In addition to the main unit (1 unit), the package contains the accessories listed on page 20.

Standard accessories are subject to change without notice.

OPTIONAL ACCESSORIES (sold separately) (Page 21)

Optional accessories are subject to change without notice.

APPLICATIONS

Trimming, scaling and mowing of weed.

BATTERY REMOVAL/INSTALLATION

1. Battery removal

Hold the housing tightly and push the battery latches to remove the battery (see **Fig. 3**).

CAUTION

Never short-circuit the battery.

2. Battery installation

Insert the battery while observing its polarities (see **Fig. 3**).

CHARGING

Before using the power tool, charge the battery as follows.

1. Connect the charger's power cord to the receptacle.

When connecting the plug of the charger to a receptacle, the charge indicator lamp will blink in red (At 1- second intervals).

2. Insert the battery into the charger.

Firmly insert the battery into the charger as shown in **Fig. 4** (on page 2).

3. Charging

When inserting a battery in the charger, the charge indicator lamp will blink in blue.

When the battery becomes fully recharged, the charge indicator lamp will light up in green. (See **Table 1**)

(1) Charge indicator lamp indication

The indications of the charge indicator lamp will be as shown in **Table 1**, according to the condition of the charger or the rechargeable battery.

Table 1

Indications of the charge indicator lamp				
Charge indicator lamp (RED / BLUE / GREEN / PURPLE)	Before charging	Blinks (RED)	Lights for 0.5 seconds. Does not light for 0.5 seconds. (off for 0.5 seconds)	Plugged into power source
	While charging	Blinks (BLUE)	Lights for 0.5 seconds. Does not light for 1 second. (off for 1 second)	Battery capacity at less than 50%
		Blinks (BLUE)	Lights for 1 second. Does not light for 0.5 seconds. (off for 0.5 seconds)	Battery capacity at less than 80%
		Lights (BLUE)	Lights continuously	Battery capacity at more than 80%
	Charging complete	Lights (GREEN)	Lights continuously (Continuous buzzer sound: about 6 seconds)	
	Overheat standby	Blinks (RED)	Lights for 0.3 seconds. Does not light for 0.3 seconds. (off for 0.3 seconds)	
	Charging impossible	Flickers (PURPLE)	Lights for 0.1 seconds. Does not light for 0.1 seconds. ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ (Intermittent buzzer sound: about 2 seconds)	

- (2) Regarding the temperatures and charging time of the rechargeable battery
The temperatures and charging time will become as shown in **Table 2**.

Table 2

Charger			UC18YSL3				
Battery	Type of battery		Li-ion				
	Temperatures at which the battery can be recharged		-10°C – 50°C				
	Charging voltage	V	14.4		18		
	Charging time, approx. (At 20°C)	min.	BSL14xx series		BSL18xx series		Multi volt series
			(4 cells)	(8 cells)	(5 cells)	(10 cells)	(10 cells)
			BSL1415S : 15 BSL1415 : 15 BSL1415X : 15 BSL1420 : 20 BSL1425 : 25 BSL1430C : 30	BSL1430 : 20 BSL1440 : 26 BSL1450 : 32 BSL1460 : 38	BSL1815S : 15 BSL1815 : 15 BSL1815X : 15 BSL1820 : 20 BSL1825 : 25 BSL1830C : 30	BSL1830 : 20 BSL1840 : 26 BSL1850 : 32 BSL1860 : 38	BSL36A18 : 32
USB	Charging voltage	V	5				
	Charging current	A	2				

NOTE

The recharging time may vary according to the ambient temperature and power source voltage.

4. Disconnect the charger's power cord from the receptacle.
5. Hold the charger firmly and pull out the battery.

NOTE

Be sure to pull out the battery from the charger after use, and then keep it.

Regarding electric discharge in case of new batteries, etc.

As the internal chemical substance of new batteries and batteries that have not been used for an extended period is not activated, the electric discharge might be low when using them the first and second time. This is a temporary phenomenon, and normal time required for recharging will be restored by recharging the batteries 2 – 3 times.

How to make the batteries perform longer.

- (1) Recharge the batteries before they become completely exhausted.
When you feel that the power of the tool becomes weaker, stop using the tool and recharge its battery. If you continue to use the tool and exhaust the electric current, the battery may be damaged and its life will become shorter.
- (2) Avoid recharging at high temperatures.
A rechargeable battery will be hot immediately after use. If such a battery is recharged immediately after use, its internal chemical substance will deteriorate, and the battery life will be shortened. Leave the battery and recharge it after it has cooled for a while.

CAUTION

- If the battery is charged while it is heated because it has been left for a long time in a location subject to direct sunlight or because the battery has just been used, the charge indicator lamp of the charger lights for 0.3 seconds, does not light for 0.3 seconds (off for 0.3 seconds). In such a case, first let the battery cool, then start charging.
- When the charge indicator lamp flickers (at 0.2-second intervals), check for and take out any foreign objects in the charger's battery connector. If there are no foreign objects, it is probable that the battery or charger is malfunctioning. Take it to your authorized Service Center.
- Since the built-in micro computer takes about 3 seconds to confirm that the battery being charged with UC18YSL3 is taken out, wait for a minimum of 3 seconds before reinserting it to continue charging. If the battery is reinserted within 3 seconds, the battery may not be properly charged.

ABOUT POWER LAMP

The power lamp indicates various statuses for the tool. (Fig. 30)

Table 3 shows the various statuses indicated by the power lamp.

Table 3

State of lamp	Status of Tool
Off	Power OFF
Red	Power ON
Blinking red	The lever is being pressed while the overload protection circuit of the tool is operating.
Quickly blinking red	The tool is operating abnormally.

REMAINING BATTERY INDICATOR








You can check the battery's remaining capacity by pressing the remaining battery indicator switch to light the indicator lamp. (Fig. 5, Table 4)

The indicator will shut off approximately 3 seconds after the remaining battery indicator switch is pressed.

It is best to use the remaining battery indicator as a guide since there are slight differences such as ambient temperature and the condition of the battery.

Also, the remaining battery indicator may vary from those equipped to a tool or charger.

 Table 4

State of lamp	Battery Remaining Power
	Lights ; The battery remaining power is over 75%
	Lights ; The battery remaining power is 50% – 75%.
	Lights ; The battery remaining power is 25% – 50%.
	Lights ; The battery remaining power is less than 25%
	Blinks ; The battery remaining power is nearly empty. Recharge the battery soonest possible.
	Blinks ; Output suspended due to high temperature. Remove the battery from the tool and allow it to fully cool down.
	Blinks ; Output suspended due to failure or malfunction. The problem may be the battery so please contact your dealer.

As the remaining battery indicator shows somewhat differently depending on ambient temperature and battery characteristics, read it as a reference.

NOTE

Do not give a strong shock to the switch panel or break it. It may lead to a trouble.

PRIOR TO OPERATION

CAUTION

Pull out battery before doing any assembly.

1. Installing the loop handle (Fig. 7) (CG36DA (L), CG36DTA (L) only)

- (1) Remove the M6 × 43 bolts (2 pcs.).
- (2) Install the loop handle on the main pipe so that it leans against the housing.
- (3) Place the handle fixture at the lower end of the main pipe and secure it firmly using M6 × 43 bolts (2 pcs.) and M6 nuts (2 pcs.).

NOTE

Secure the loop handle in a location that provides a good grip.

CAUTION

Install the loop handle properly and securely as instructed in the handling instructions.

If not attached properly or securely, it may come off and cause injury.

2. Installing the bicycle-style handlebars (Fig. 8)

- (1) Using the 4 mm hex wrench that is included, remove the four bolts that have been temporarily secured to the handle brace (A).
- (2) Attach the right-hand side handgrip that has the lever and the left-hand side handgrip, and then carefully secure the handle brace (A) using the four bolts.

NOTE

Secure the left and right handgrips in a position that provides a good grip.

CAUTION

Install the left and right handgrips properly and securely as instructed in the handling instructions.

If not attached properly or securely, it may come off and cause injury.

3. Extending the main pipe (Fig. 9)

- (1) Release the locking lever to allow the main pipe to be extended.
- (2) Extend the main pipe as far as it will go, making sure that you hear it click.

NOTE

The motor will not operate unless the main pipe is fully extended.
When you push the power button, the red power light will flash rapidly.

- (3) After extending the main pipe until it clicks, check that the hole of the holder case is aligned with the hole of the main pipe and lock the locking lever to fix the main pipe securely.

4. Installing cover (See Fig. 10 and 11)

WARNING

Be sure to install the cover in its designated location.
Failure to heed this warning may result in injury from flying stones.

NOTE

Use the supplied hex. bar wrench 4 mm for installation.

- (1) Use the supplied D5 tapping screw to install the knife in the cover. (Fig. 10)
- (2) Align the two holes in the cover bracket and the cover and insert two M6 × 25 hex. socket button bolts. (The cover bracket is installed in the motor case.)
- (3) Place the cover holder on the underside of the cover and use the supplied hex. bar wrench 4 mm to alternately tighten the two M6 × 25 hex. socket button bolts until they are properly tightened.

CAUTION

- Take care to avoid cutting yourself on the knife inside the cover.
- Install the cover and knife properly and securely as instructed in the handling instructions.
If not attached properly or securely, they may come off and cause injury.

5. Installing the shoulder belt

Use in combination with a BSL36A18 battery.

WARNING

- Be sure to attach the shoulder belt so that the grass trimmer can be carried correctly.
- If you get the feeling the tool is not operating normally, turn off the motor immediately, remove the quick-release bracket of the shoulder belt and remove the tool.

CAUTION

- If you do not support the tool when you pull the quick-release belt, it may fall causing injury or damage.
Hold the main pipe with one hand while you pull with the other hand.
 - Make sure the quick-release function operates normally before you start working.
- (1) Place the shoulder belt on the shoulder as shown in Fig. 12 (For use outside of Europe, see Fig. 14) and engage it with the hanger on the tool. Adjust the shoulder belt to suitable length.
 - (2) To remove the tool from the shoulder belt, support the tool by holding the main pipe with one hand and use the other hand to pull the quick-release belt as shown in Fig. 12 (For use outside of Europe, see Fig. 14) to free it from the bracket.
 - (3) To strap on the tool, insert the bracket in the hook and insert the quick-release bracket over the hook and into the wide opening of the bracket. (Fig. 13) (For use outside of Europe, see Fig. 15)
Gently pull the shoulder belt to make sure that it is properly attached.

NYLON HEAD

Installation of semi-auto nylon head

1. Function

Automatically feeds more nylon cutting line when it is tapped.

Specifications

Code No.	Type of attaching screw	Direction of rotation	Size of attaching screw
335234	Female screw	Counterclockwise	M10× P1.25-LH

Applicable nylon cord

Cord diameter: Fig. 17

Length: 4 m

CAUTION

- The case must be securely attached to the cover.
- Check the cover, case and other components for cracks or other damage.
- Check the case and button for wear.
If the wear limit mark on the case is no longer visible or there is a hole in the bottom of the button, change the new parts immediately. (Fig. 20)
- The nylon head must be securely mounted to the threaded fastener of the motor case.
- For outstanding performance and reliability, always use Hitachi nylon cutting line. Never use wire or other materials that could become a dangerous projectile.
- If the nylon head does not feed cutting line properly, check that the nylon line and all components are properly installed. Contact your Hitachi dealer if you need assistance.

2. Installation (Fig. 16 and 18)

- (1) Insert the flange assy into the motor case. At this time, the wing of the flange assy should face the motor case side. Next, align the holes of the flange assy and the motor case, insert the hex. bar wrench 4 mm, and then turn to tighten the flange assy.
- (2) Screw the nylon head directly to the threaded fastener of the motor case.
The mounting nut of nylon head is left-hand-threaded. Turn clockwise to loosen/ counterclockwise to tighten.

CAUTION

Install the nylon head properly and securely as instructed in the handling instructions.

If not attached properly or securely, it may come off and cause injury.

3. Adjustment of line length

Rotate and tap the nylon head on the ground. Nylon line is drawn out abt. 30 mm by one tapping. (Fig. 19)
Also, you can extend nylon line with hands. This time the motor must be completely stopped.

Confirm the line extends in 30 mm increments by "tapping" and "releasing" the bottom button while pulling the line ends of the nylon head. (Fig. 20)

- Appropriate Length of Nylon Line

The appropriate length of the line when the tool is in use is 90 – 110 mm. Extend the line to the appropriate length.

4. Nylon line replacement

- (1) Prepare 4m of genuine nylon line in Fig. 17. (Code No. 335235)
- (2) Press the opposing tabs, and then remove the cover from the case. (Fig. 21)
- (3) Remove the reel from the case. (Fig. 22)
- If there is nylon line remaining, hook the line in the grooves, and then remove the reel.
- If the nylon line does not extend when there is enough nylon line remaining, or when replacing the nylon line (Code No. 335235), wind the nylon line using the following procedure.

- (4) Release about 150 mm of the nylon cord from both ends, fold the middle part and attach to the hook on the spool. Next, wind the cord on the spool in the direction shown by the arrow, being careful not to crisscross it (**Fig. 23, 24**).
- (5) Leave about 100 mm – 150 mm nylon cord unwound, hook and secure the line in the stopper. (**Fig. 25**)

NOTE

Do not cross the nylon line when securing the line in the stopper. (**Fig. 26**)

- (6) Align the position of the stopper and eyelet line guide, and then insert the button through the case. Release the line from the stopper while holding the reel lightly, and then string the line through the eyelet line guide. (**Fig. 27**)
- (7) Press and snap the tabs of the case in the locking holes of the cover. (**Fig. 28**)

WARNING

Check to make sure the tabs are firmly snapped into the locking holes. Operating the tool while the parts are not firmly snapped together may result in accidents or injury from flying part.

- (8) Pull the line taught so there is no slack, and then cut the line to an extended length of 90 mm – 110 mm with scissors. (**Fig. 29**)

When you release the lever, the brake engages in 1 – 3 seconds, stopping rotation of the nylon head.

Make sure that the brake operates normally before using the tool.

4. Speed dial (**Fig. 32**)

A speed dial for changing the rotational speed in the range of 5800 – 7000 /min is provided on the housing. Turn the dial clockwise to increase the speed and counterclockwise to reduce the speed.

5. Trimming grass

- Grip the handle from above, press the locking lever and pull the lever to start cutting head rotation. (**Fig. 33**)
- Release the lever when you finish trimming and stop the motor.
- Place your thumb on the handle and grip the handle with your other fingers. (**Fig. 34**) (CG36DA, CG36DTA only)
- Place your thumb on the loop handle and grip the handle with your other fingers. (**Fig. 35**) (CG36DA (L), CG36DTA (L) only)
- Take a posture that makes it easy to move.

[Grass trimming techniques]

Do not swing the pipe, but use the hips to move the nylon head horizontally from right to left in an arc while going forward and use the left side of the nylon head for cutting grass. (**Fig. 36**)

OPERATION

Trimming grass

WARNING

- Do not operate the tool at night or under bad weather conditions when visibility is poor.
- Do not operate the tool when it is raining or right after it has been raining.
- Wear proper footwear to prevent slipping that could cause you to lose your balance and fall.
- Do not use the tool on steep slopes. When trimming grass on slopes that are not so steep, trim by moving towards the ridge.
- Place the right hand on the handle and the left hand on the loop handle and hold it firmly.
- Take care not to move the nylon head too close to your feet.
- Do not raise the nylon head above your knee during cutting.
- Do not use the tool where the nylon head may come into contact with stones, tree and other obstacles.
- A nylon head can injure while it continues to spin after the motor is stopped. When the unit is turned off, make sure the nylon head has stopped before the unit is set down.
- Do not use the tool within 15 m of another person. When you work with someone else, maintain a distance of more than 15 m.

1. Insert the battery while observing its polarities.

2. Turn on the tool. (**Fig. 30**)

- Press the power button on the housing, the power goes on and the power lamp on the housing or handle lights red.
- Pressing the power button a second time turns the power off and the red lamp on the housing or handle goes off.

[Auto power off]

When the power is turned on but the lever is not used for one minute, the tool is automatically turned off. To turn the tool on again, press the power button a second time.

WARNING

Never leave the tool with the power on. This could result in an accident.

3. Lever operation and brake (**Fig. 31**)

To start rotation of the nylon head, with the power turned on, pull the lever while pressing the locking lever.

OPERATIONAL CAUTIONS

Continuous work

This tool comes with an over-heat protection circuit that protects the electronic parts that control the rechargeable battery. In continuous trimming work, tool temperature will rise and eventually trigger the over-heat protection circuit, which will shut down the tool.

If this happens, let the tool cool for a length of time. When the temperature drops, it will again become possible to use the tool. When the rechargeable battery has to be exchanged during continuous operation, let the tool rest for about 15 minutes.

Overload Protection

This tool comes with an overload protection circuit to protect the electronic parts controlling the tool. In continuous overload during trimming work (locking the nylon head, etc.), the overload protection circuit shuts down the motor. If this happens, turn OFF the power, and then resolve the problem causing the overload.

The power lamp blinks if the lever is pressed after the motor has stopped (see page 14, "ABOUT POWER LAMP"). The power automatically turns OFF if the power lamp blinks longer than 5 seconds. If this happens, resolve the problem causing the overload, and then switch the power button ON to resume using the tool.

Carrying the tool (**Fig. 37**)

CAUTION

- Remove the storage battery.
- Carry the tool holding with hands.
- When retracting the main pipe, be careful of the pointed end and take care not get your fingers caught. (CG36DTA, CG36DTA (L) only)

Release the locking lever and retract the main pipe. Lock the locking lever until the projection hits the main pipe. This procedure allows you to reduce the tool to a compact size. The main pipe can be retracted to any position. Choose a suitable length for carrying and storage. (CG36DTA, CG36DTA (L) only)

ABOUT USB DEVICE

- Charging a USB device from an electrical outlet. (Fig. 42-a)
- Charging a USB device and battery from an electrical outlet. (Fig. 42-b)
- How to recharge USB device. (Fig. 43)
- When charging of USB device is completed. (Fig. 44)

MAINTENANCE AND INSPECTION

CAUTION

Pull out battery before doing any inspection or maintenance.

1. Checking the condition of the nylon head

The nylon head should be checked regularly. If worn or broken nylon head can slip or decrease the efficiency of the motor and burn it out.

Replace worn nylon head with new ones.

CAUTION

If you use a nylon head of which point is worn or broken, it will be dangerous. So replace it with a new one.

2. Check the Screws

Loose screws are dangerous. Regularly inspect them and make sure they are tight.

CAUTION

Using this power tool with loosened screws is extremely dangerous.

3. Inspecting the carbon brushes (Fig. 38)

The motor employs carbon brushes which are consumable parts. Since and excessively worn carbon brush can result in motor trouble, replace the carbon brush with new ones when it becomes worn to or near the "wear limit". In addition, always keep carbon brushes clean and ensure that they slide freely within the brush holders.

NOTE

When replacing the carbon brush with a new one, be sure to use the Hitachi Carbon Brush Code No. 999015.

4. Replacing carbon brushes

Take out the carbon brush by first removing the brush cap and then hooking the protrusion of the carbon brush with a slotted head screw driver, etc., as shown in Fig. 39.

When installing the carbon brush, choose the direction so that the nail of the carbon brush (see Fig. 40) agrees with the contact portion of brush tube. Then push it in with a finger as illustrated in Fig. 41. Lastly, install the brush cap.

CAUTION

- Be absolutely sure to insert the nail of the carbon brush into the contact portion of brush tube. (You can insert whichever one of the two nails provided.)
- Caution must be exercised since any error in this operation can result in the deformed nail of the carbon brush and may cause motor trouble at an early stage.

5. Inspection of terminals (tool and battery)

Check to make sure that swarf and dust have not collected on the terminals.

On occasion check prior, during and after operation.

CAUTION

Remove any swarf or dust which may have collected on the terminals.

Failure to do so may result in malfunction.

6. Cleaning of the outside

When the grass trimmer is stained, wipe with a soft dry cloth or a cloth moistened with soapy water. Do not use chloric solvents, gasoline or paint thinner, as they melt plastics.

7. Storage

Store grass trimmer in a place in which the temperature is less than 40°C and out of reach of children.

NOTE

Storing Lithium-ion Batteries

Make sure the lithium-ion batteries have been fully charged before storing them.

Prolonged storage (3 months or more) of batteries with a low charge may result in performance deterioration, significantly reducing battery usage time or rendering the batteries incapable of holding a charge.

However, significantly reduced battery usage time may be recovered by repeatedly charging and using the batteries two to five times.

If the battery usage time is extremely short despite repeated charging and use, consider the batteries dead and purchase new batteries.

CAUTION

In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.

SELECTING ACCESSORIES

The accessories of this machine are listed on page 21.

Important notice on the batteries for the Hitachi cordless power tools

Please always use one of our designated genuine batteries. We cannot guarantee the safety and performance of our cordless power tool when used with batteries other than these designated by us, or when the battery is disassembled and modified (such as disassembly and replacement of cells or other internal parts).

NOTE

Due to HITACHI's continuing program of research and development, the specifications herein are subject to change without prior notice.

TROUBLESHOOTING










Use the inspections in the table below if the tool does not operate normally. If this does not remedy the problem, consult your dealer or the Hitachi Authorized Service Center.


1. Power tool

Symptom	Possible cause	Remedy
Does not operate.	The rechargeable battery is depleted.	Charge the rechargeable battery.
	The rechargeable battery has not been properly installed.	Remove the rechargeable battery from the battery compartment in the tool and check for and remove any foreign matter. Also check the battery electrodes for soiling, water or other foreign matter. Use a cotton swab for cleaning. Make sure that the rechargeable battery is pressed in until it clicks into place.
	The power has not been turned on.	Press the power button on the housing to start the tool. This tool comes with an auto power off function. The power is automatically turned off if nobody pulls the lever during a one minute period after power on. To turn the tool on again, press the power button a second time. Pressing the power button a second time turns the power off.
	The main pipe is not fully extended (The red light blinks rapidly) (CG36DTA, CG36DTA (L) only)	To prevent accidents due to malfunction, the tool is designed so that the motor will not operate unless the main pipe is fully extended. Extend the main pipe fully until it clicks.
	The lock lever was not pressed when the lever was pulled back.	To prevent accidents from incorrect operation, the lock lever must be pressed while the lever is pulled back to start the motor. Hold the handle from above and press the lock lever while pulling the handle.
	The tool pulls in large volumes of grass that are caught between the cover and the nylon head, the tool is overloaded.	This is the effect of a function that protects the rechargeable battery by turning off the motor when the tool is exposed to an excessive load. Turn off the tool and remove the cause of the overload. Press the power button once again to continue operation.
The speed does not change	The rechargeable battery power is low.	Charge the rechargeable battery.
Goes on, but soon stops.	The rechargeable battery power is low.	Charge the rechargeable battery.
	The rechargeable battery is overheated.	Stop using the rechargeable battery, remove it from the tool and let it cool in a well-ventilated location not exposed to sunlight.
	The locking lever is not locked, causing the main pipe to shorten up during work. (The red light blinks rapidly) (CG36DTA, CG36DTA (L) only)	Lock the locking lever.
Strong vibrations.	The loop handle is not properly attached to the main pipe.	Secure properly.
	The cover is not been properly attached to the main pipe.	Secure properly.
The brake fails to engage 1-3 seconds after the lever is released.	This may be due to a malfunction of the tool.	Contact the store where you purchased the tool or your nearest Hitachi Authorized Service Center.
Battery cannot be installed	Attempting to install a battery other than that specified for the tool.	Please install a multi volt type battery.


2. Charger

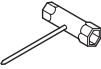Symptom	Possible cause	Remedy
The charge indicator lamp rapidly flickers purple, and battery charging doesn't begin.	The battery is not inserted all the way.	Insert the battery firmly.
	There is foreign matter in the battery terminal or where the battery is attached.	Remove the foreign matter.
The charge indicator lamp blinks red, and battery charging doesn't begin.	The battery is not inserted all the way.	Insert the battery firmly.
	The battery is overheated.	If left alone, the battery will automatically begin charging if its temperature decreases, but this may reduce battery life. It is recommended that the battery be cooled in a well-ventilated location away from direct sunlight before charging it.
Battery usage time is short even though the battery is fully charged.	The battery's life is depleted.	Replace the battery with a new one.
The battery takes a long time to charge.	The temperature of the battery, the charger, or the surrounding environment is extremely low.	Charge the battery indoors or in another warmer environment.
	The charger's vents are blocked, causing its internal components to overheat.	Avoid blocking the vents.
	The cooling fan is not running.	Contact a Hitachi Authorized Service Center for repairs.
The USB power lamp has switched off and the USB device has stopped charging.	The battery's capacity has become low.	Replace the battery with one that has capacity remaining.
		Plug the charger's power plug into an electric socket.
USB power lamp does not switch off even though the USB device has finished charging.	The USB power lamp lights up green to indicate that USB charging is possible.	This is not a malfunction.
It is unclear what the charging status of a USB device is, or whether its charging is complete.	The USB power lamp does not switch off even when charging is complete.	Examine the USB device that is charging to confirm its charging status.
Charging of a USB device pauses midway.	The charger was plugged into an electrical socket while the USB device was being charged using the battery as the power source.	This is not a malfunction. The charger pauses USB charging for about 5 seconds when it is differentiating between power sources.
	A battery was inserted into the charger while the USB device was being charged using a power socket as the power source.	
Charging of the USB device pauses midway when the battery and the USB device are being charged at the same time.	The battery has become fully charged.	This is not a malfunction. The charger pauses USB charging for about 5 seconds while it checks whether the battery has successfully completed charging.
Charging of the USB device doesn't start when the battery and the USB device are being charged at the same time.	The remaining battery capacity is extremely low.	This is not a malfunction. When the battery capacity reaches a certain level, USB charging automatically begins.


	CG36DA		CG36DTA	
	(XC)	(NN)	(XC)	(NN)
	1	–	1	–
	1	–	1	–
	1	–	1	–
	1	1	1	1
	1	1	1	1
	1	1	1	1
	1	1	1	1
	1	1	1	1
	1	1	1	1

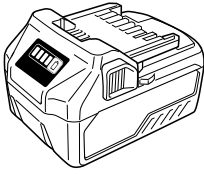

BSL36A18

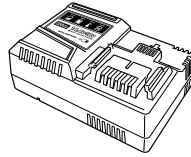


UC18YSL3

 

329897



 
6684813




6684764



330787

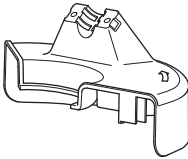

333899

 


335234




335235




 875769



999016

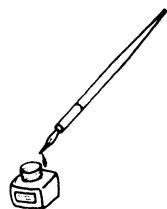

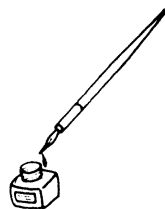



Shinagawa Intercity Tower A, 15-1, Konan 2-chome,
Minato-ku, Tokyo, Japan

710
Code No. C99724511 G
Printed in China